

COLD AIR



INDUCTIONS

Installation Instructions

1999-2003 Grand Prix GT, GTP

1999-2004 Regal GS

2000-2005 Monte Carlo SS

2000-2005 Impala SS

(Part # 501-0873-B)



WWW.COLDAIRINDUCTIONS.COM

****This Product is NOT C.A.R.B. Compliant****



1B00K-0004

Parts List

| | |
|----------|--|
| 1 | Insulated Air Box \ Lid with removable PCM tray |
| 1 | Installation Packet |
| 1 | Air Filter (CF-9350) |

Tools Required

| |
|--------------------------------|
| 5/32 Allen Wrench |
| 1 Flathead Screw Driver |

****Disconnect the negative battery cable before installation, re-install once installation is complete****

1. Removing OEM Air Box

- I.** Remove diagonal cross brace.
- II.** Loosen hose clamp on F-duct.
- III.** Remove OEM air box.
(Removing air box does not require PCM to be disconnected)

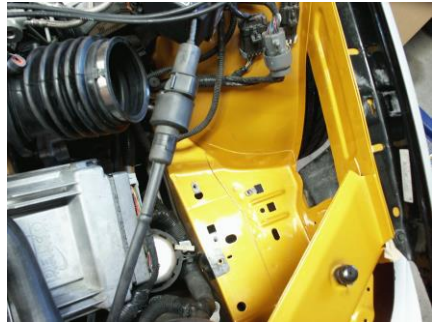


Figure 1

2. Installing PCM Tray & PCM

- I.** Lay connected PCM to side
(As shown in figure 1).
- II.** Install provided C-clip nuts into inner fender well (As shown in figure 2).
- III.** Install PCM tray. Fasten tray with the two provided bolts (As shown in figure 3).
- IV.** Place PCM into PCM tray
(As shown in figure 4).



Figure 2



Figure 3



Figure 4

****Note: If PCM tray will not fit due to metal stud. Remove stud****

3. Installing CAI, Inc. Air Box

I. Place air box onto PCM tray (As shown in figure 5).

II. Fasten air box to PCM with the three provided screws. (As shown in figure 5). This will secure the PCM.

****For ease of installment, install screws as numbered in figure 5. ****



Figure 5

4. Installing CAI, Inc. 9" High Performance Filter

I. Install supplied aluminum tube into air filter (As shown in figure 6)

II. Tighten base of filter onto aluminum tube firmly.

III. Place filter into air box (As shown in figure 7). Put tube into stock F-duct and tighten hose clamp securely.



Figure 6



Figure 7

5. Installing Air Box Lid

I. Place edge of lid under radiator support (As shown in figure 8).

II. Place lid onto air box and secure by turning quarter turn fasteners 1/4 turn.



Figure 8

6. Reinstall Diagonal Cross Bracket. (See figure 9).

Reconnect negative battery terminal. Install complete.

****Periodically Inspect connections and clamps to ensure that everything is still installed tightly****



Figure 9

****IMPORTANT****

Warranty Registration Instructions

This product comes with a Limited Lifetime Warranty and must be registered online for your warranty to be activated.

To register your product:

1. Go to: www.ColdAirInductions.com/contact-us/register
2. Fill out our registration form
3. Click Submit

Warranty details can be found under the FAQ section on our website